

**RF3170357**

Ic Suspension 1/Suspension 2 chrome ceiling rose assembly



---

**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

**RF3170357**

Ic Suspension 1/Suspension 2 chrome ceiling rose assembly

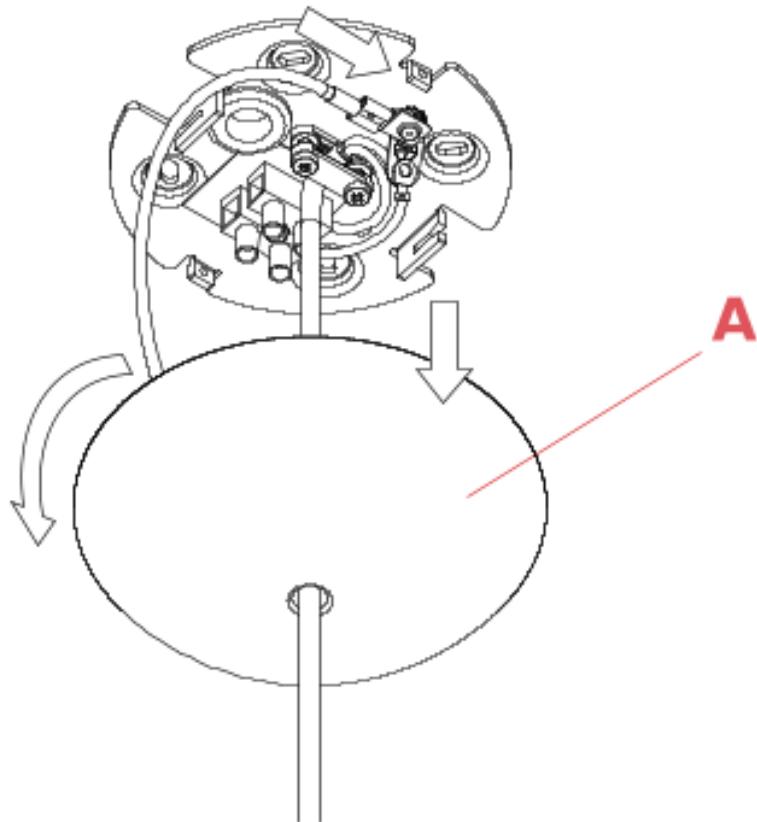


Fig.1

Disassemble the ceiling rose by unscrewing the cover (A) and moving it downwards.

**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

**RF3170357**

Ic Suspension 1/Suspension 2 chrome ceiling rose assembly

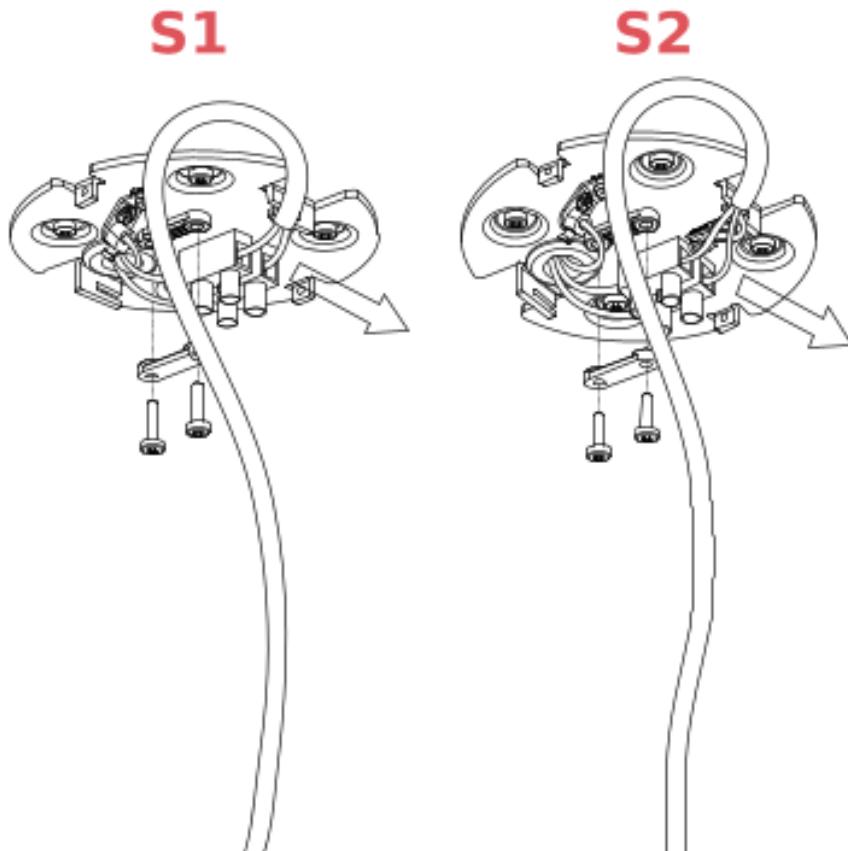


Fig.2

Disconnect the lamp from the terminals.

**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

**RF3170357**

Ic Suspension 1/Suspension 2 chrome ceiling rose assembly

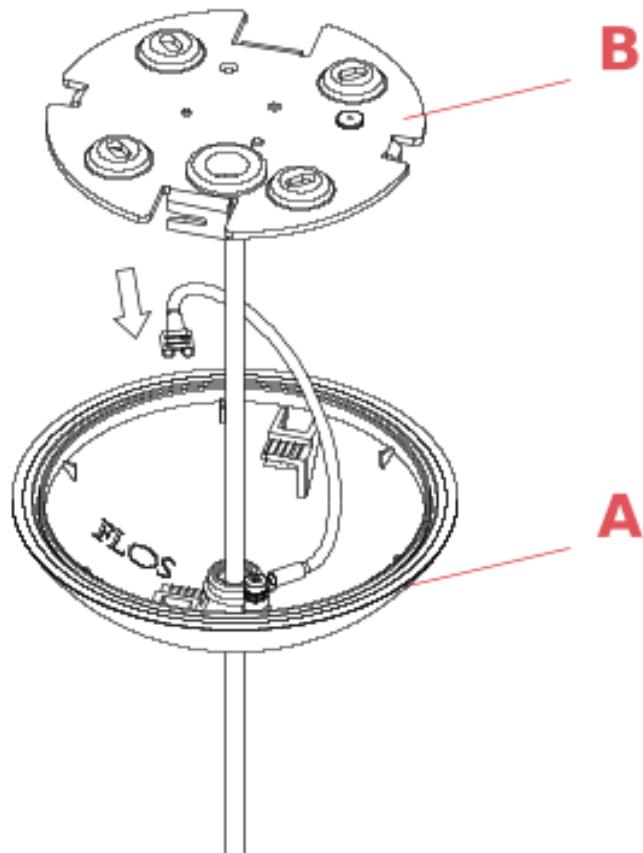


Fig.2

Disconnect the cable connecting the cover (A) to the wall attached (B) and unplug the complete fixture.  
Assemble now the spare-part.

**WARNING!** When installing and whenever acting on the appliance, ensure that the power supply has been switched off.  
For the installation of the spare-part, it is necessary to consult a qualified electrician.