


RF9523139

Wireline Assembly Rose Cover Green

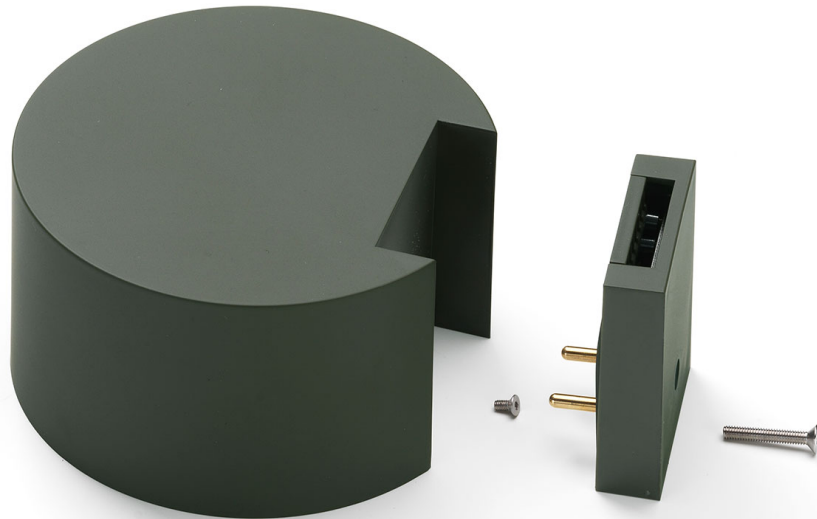

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

RF9523139

Wireline Assembly Rose Cover Green



Fig.1



Fig.2

Unfasten the screw (A) using the allen key and disassemble the ceiling rose.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

RF9523139

Wireline Assembly Rose Cover Green



Fig.3



Fig.4

Unfasten the screw (B) using the allen key and lift the cover.
Assemble now the new spare-part.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.